

# **Installation Manual**

# **Roller Shades**

# MEDIUM BRACKET CORDLESS WITH TASSEL LIFT

**Inside Mount • Jamb Mount • Outside Mount** 



Click, or scan with your phone for video instructions.



# MEDIUM BRACKET CORDLESS WITH TASSEL LIFT



video instructions

Read the instructions carefully before assembling and using the product. Assembling process can be completed by non-professionals. For indoor use only.

# **DO NOT OPEN WITH SHARP OBJECT – Remove Outer Wrap with Care**

### WHAT YOU NEED

We recommend wearing Safety Glasses when installing your Roller Shades.



- Drill
- Drill Bits
- Screwdriver
- Measuring Tape
- Pencil
- Level
- Safety Glasses

5.23



## MEDIUM BRACKET CORDLESS WITH TASSEL LIFT



Click, or scan with your phone for video instructions

### WHAT'S IN THE BOX

Depending on what you ordered, the fabric and the color of the hardware may be different.



- 1Roller Shade
- 2 Medium Base Brackets
- 2 Screw Cap Covers
- 2 Medium Bracket Covers
- 1 Pin End for Stop Mechanism
- 4 Screws

# **Mounting Options**



### **Inside Mount**

With an inside mount the window treatment will be mounted and hung on the inside of the window frame.


An inside mount has a minimum depth requirement.\*



### **Jamb Mount**

With a jamb mount the window treatment will be mounted into the vertical sides and hung on the inside of the window frame.

A jamb mount has a minimum depth requirement.\*

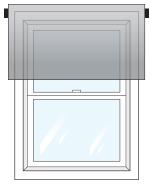

#### **Outside Mount**

With an outside mount the window treatment will be mounted and hung on the outside of the window frame.

An outside mount does **not** have a minimum depth requirement.




## MEDIUM BRACKET CORDLESS WITH TASSEL LIFT



Click, or scan with your phone for video instructions

We recommend reading through the instructions before installing your Roller Shades.


### **INSTALLING YOUR ROLLER SHADE**

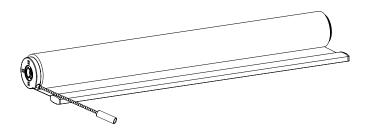

- Check your window before you install your Roller Shade.
  Brackets must be in line and level. The roller must be level to prevent fabric skewing.
- We recommend wearing Safety Glasses when installing your Roller Shade.
- We recommend wearing Work Gloves to keep your Roller Shade clean while installing it.


### 1. Assemble Brackets

· Attach Bracket Covers to Base Brackets by sliding them together.




### 2. Mounting Your Brackets

- Place the assembled bracket against the window casing.
- · Add Pencil Marks Where the two Screws Will Go.
- Pre-Drill the Two Holes.
- Install the Medium Base Bracket with the Bracket Cover attached.
- Remove the Bracket Cover.
- · Repeat on the Other Side.
- Make Sure Your Medium Brackets are Level and in Line.




# Mounting Brackets for INSIDE MOUNT

 For an Inside Mount the Brackets will be mounted on the inside of the window frame.

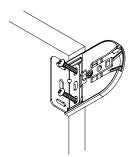

# Mounting Brackets for JAMB MOUNT

 For a Jamb Mount the Brackets will be mounted into the vertical sides on the inside of the window frame.

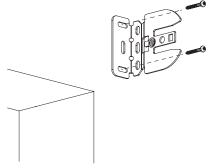

# Mounting Brackets for OUTSIDE MOUNT

 For an Outside Mount the Brackets will be mounted on the outside of the window frame.






#### Click, or scan with your phone for video instructions.


# **MEDIUM BRACKET CORDLESS WITH TASSEL LIFT**

### 3. Screw Cap Covers

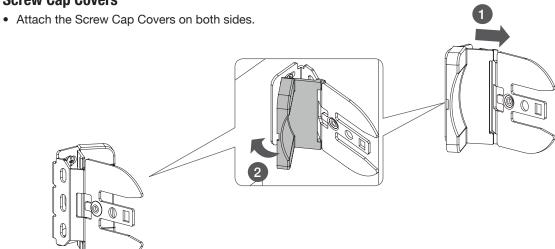

### 4. Pin End for Stop Mechanism

- The Pin End slides onto the bracket OPPOSITE of the red locking clip on the shade, i.e., Red Locking clip is on the left, the pin end installs on the right hand bracket.
- Make Sure That the "Metal" Arrow on the Back is Pointing Up.

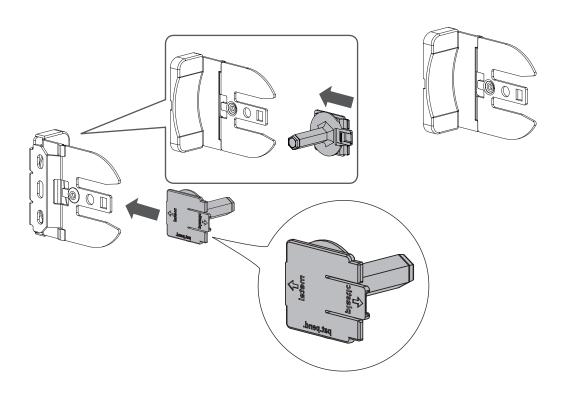







### your phone for video instructions.

# **MEDIUM BRACKET CORDLESS WITH TASSEL LIFT**

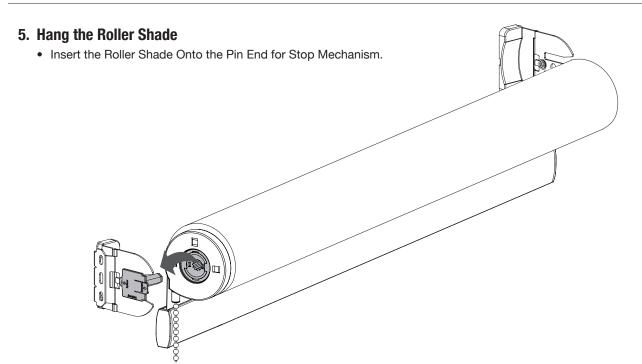

• Slide the other end of the roller shade onto the opposite bracket.

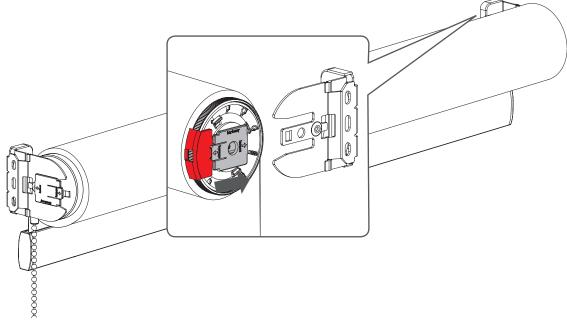







#### Click, or scan with your phone for video instructions.

# **MEDIUM BRACKET CORDLESS WITH TASSEL LIFT**

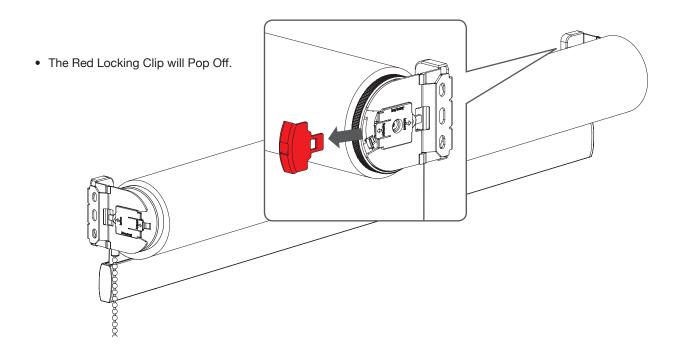

### 6. Remove Paper

• Remove the Protective Paper from the Roller Shade.

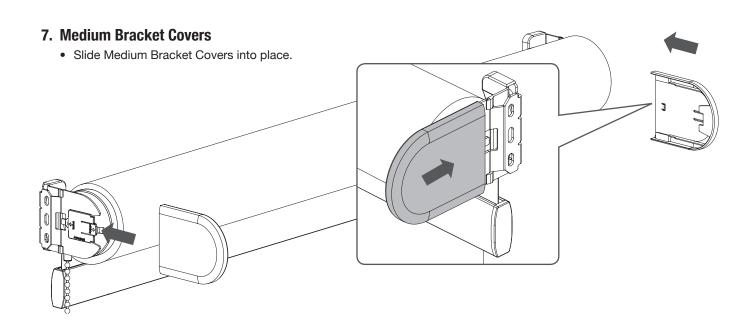






# **MEDIUM BRACKET CORDLESS WITH TASSEL LIFT**

#### Click, or scan with your phone for video instructions.

### 9. Adjust Tension

Adjust tension on the wheel opposite side of the Pull Tassel.
 This changes the roll-up speed.

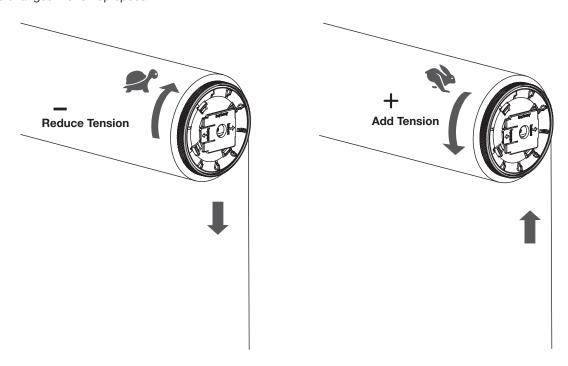

### 10. Operate the Roller Shade

To Lower your Shade, pull the Smooth Hem Bar down to reach your lower level. To Raise your Shade, pull Tassel in a short motion and release.



# Click, or scan the QR code to become a Dealer.

