

Installation Manual

Roller Shades

MEDIUM BRACKET COULISSE EVE MOTION MOTORIZATION

Inside Mount • Jamb Mount • Outside Mount




Click, or scan with your phone for video instructions.

windowmodes.com



Read the instructions carefully before assembling and using the product. Assembling process can be completed by non-professionals. For indoor use only.

AWARNING



your child. To prevent strangulation, purchase cordless products or products with inaccessible cords.

A ADVERTENCIA

La cuerda de la persiana puede



ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.





Votre enfant peut S'ÉTRANGLER avec un cordon de store. Pour éviter la strangulation,

achetez un produit sans cordon ou dont le cordon n'est pas accessible.

HANDLE WITH CARE – Antenna Attached **DO NOT OPEN WITH SHARP OBJECT** – Remove Outer Wrap with Care

WHAT YOU NEED

We recommend wearing Safety Glasses when installing your Roller Shades.



- Drill
- Drill Bits
- Screwdriver
- Measuring Tape
- Pencil
- Level
- Safety Glasses


WHAT'S IN THE BOX

Depending on what you ordered, the fabric and the color of the hardware may be different.



- 1 Motorized Roller Shade
- 2 Medium Base Brackets
- 2 Screw Cap Covers
- 2 Medium Bracket Covers
- 1 Adjustable Idler End (Part 1)
- 1 Adjustable Idler End (Part 2)
- 1 Allen Key
- 4 Screws
- Charging Cable (1 Charging Cable will come with each order)


Mounting Options

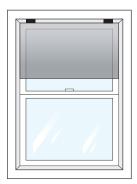

Inside Mount With an inside mount the window treatment will be mounted and hung on the inside of the window frame.

NEED HELP?

An inside mount has a minimum depth requirement.*

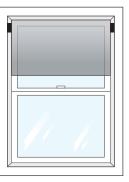

Jamb Mount

With a jamb mount the window treatment will be mounted into the vertical sides and hung on the inside of the window frame.

A jamb mount has a minimum depth requirement.*



Outside Mount

With an outside mount the window treatment will be mounted and hung on the outside of the window frame.


An outside mount does **not** have a minimum depth requirement.





We recommend reading through the instructions before installing your Roller Shades.

INSTALLING YOUR ROLLER SHADE

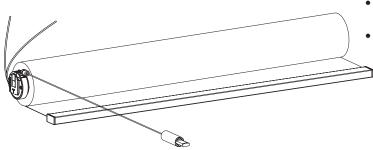


- Check your window before you install your Roller Shade. Brackets must be in line and level. The roller must be level to prevent fabric skewing.
- We recommend wearing Safety Glasses when installing your Roller Shade.
- We recommend wearing Work Gloves to keep your Roller Shade clean while installing it.

1. Assemble Brackets

• Attach Bracket Covers to Base Brackets by sliding them together.




- Place the assembled bracket against the window casing.
- Add Pencil Marks Where the two Screws Will Go.
- Pre-Drill the Two Holes.
- Install the Medium Base Bracket with the Bracket Cover attached.
- Remove the Bracket Cover.
- Repeat on the Other Side.
- Make Sure Your Medium Brackets are Level and in Line.




Mounting Brackets for INSIDE MOUNT

• For an Inside Mount the Brackets will be mounted on the inside of the window frame.



Mounting Brackets for JAMB MOUNT

• For a Jamb Mount the Brackets will be mounted into the vertical sides on the inside of the window frame.





Mounting Brackets for OUTSIDE MOUNT


• For an Outside Mount the Brackets will be mounted on the outside of the window frame.

NEED HELP?




3. Screw Cap Covers

• Attach the Screw Cap Covers on both sides.

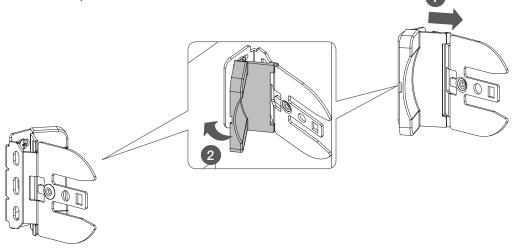

4. Adjustable Idler End Part 1 and Part 2


- Slide Part 1 of the Adjustable Idler End on the bracket that will be opposite of the bead chain mechanism.
- Make Sure That the "Metal" Arrow on the Back of Adjustable Idler End Part 1 is Pointing Up.
- Slide Part 2 of the Adjustable Idler End onto the same bracket.
- Make Sure the Arrows on the Front of the idler end are Pointing Up.

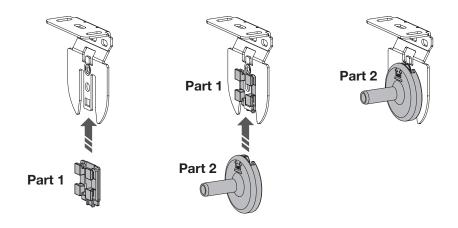




5. Hang the Roller Shade

• Insert the Roller Shade Onto the Adjustable Idler End.

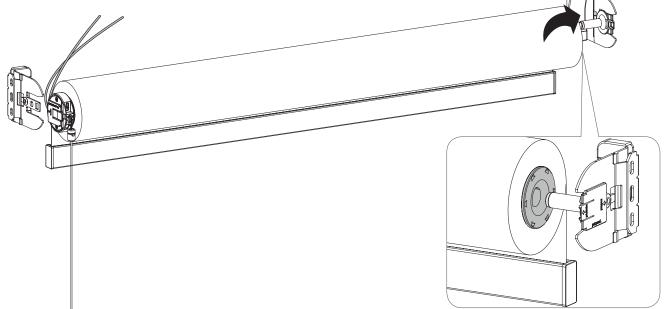

- Slide the other end of the roller shade onto the opposite bracket.
- Make Sure the Roller Shade is Level.

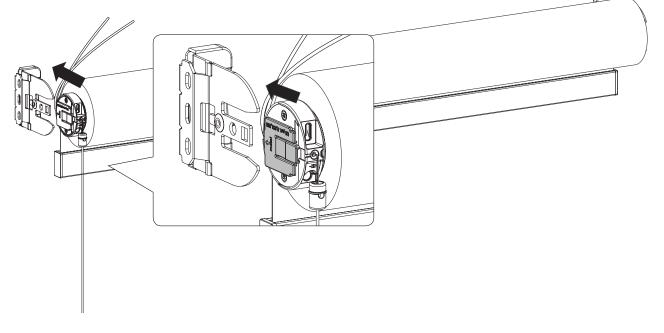




6. Remove Paper

• Remove the Protective Paper from the Roller Shade.

7. Medium Bracket Covers

• Slide Medium Bracket Covers into place.

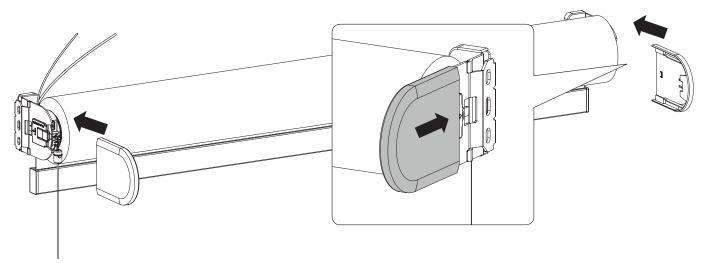

8. Operate the Roller Shade

• The upper and lower limits of your shade have been programmed at the factory. To adjust the upper and lower limits for operation of your Tassel, Remote or phone App, click or scan the QR code.





Click, or scan the QR code to become a Dealer.



windowmodes.com